




MAZDA CX-6e

Body Type : 5 door SUV
(2026-)

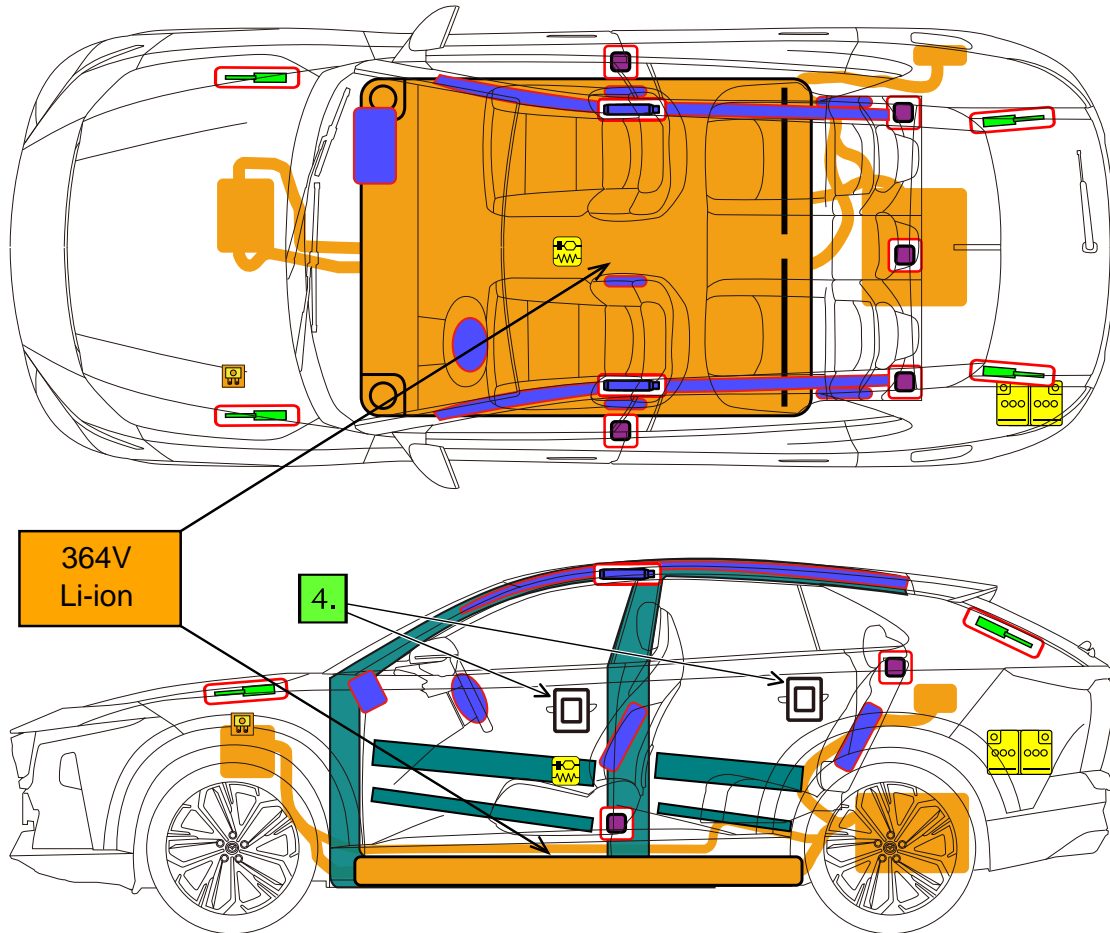

	Seat belt pretensioner		SRS control unit		Airbag		Battery low voltage
	High strength zone		Battery pack, high-voltage		Zone requiring special attention		High voltage power cable / component
	Fuse box disabling high voltage		Stored gas inflator		Gas strut / Preloaded spring		

1. Identification / recognition



WARNING: LACK OF NOISE DOES NOT MEAN VEHICLE IS OFF: SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN. WEAR APPROPRIATE PPE.




2. Immobilisation/stabilisation/lifting

IMMOBILIZE THE VEHICLE

- Block the wheels.
- When the vehicle is stationary, press the brake pedal and simultaneously engage the P(Park) position on the steering column-mounted gear selector.
- Put the car in P position.



LIFTING POINTS

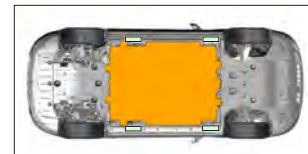

Appropriate lifting points

High voltage battery

3. Disable direct hazards / safety regulations

Systems that do not operate if power is lost

Door lock



Power window



Shift-by-electric



Electric liftgate opener



Power seat



Power roof sunshade



Procedure when EV is connected for charging

Charge connector is unlocked

1. Remove the charge connector.



Charge connector is locked

1. Lift up the luggage mat.





2. Pull the cable to unlock the slow charging cable.




Procedure for disabling high voltage system

Main disabling method

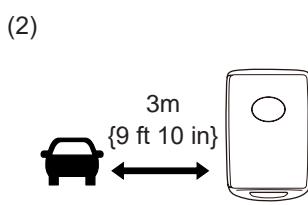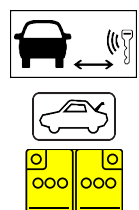


Alternative disabling method

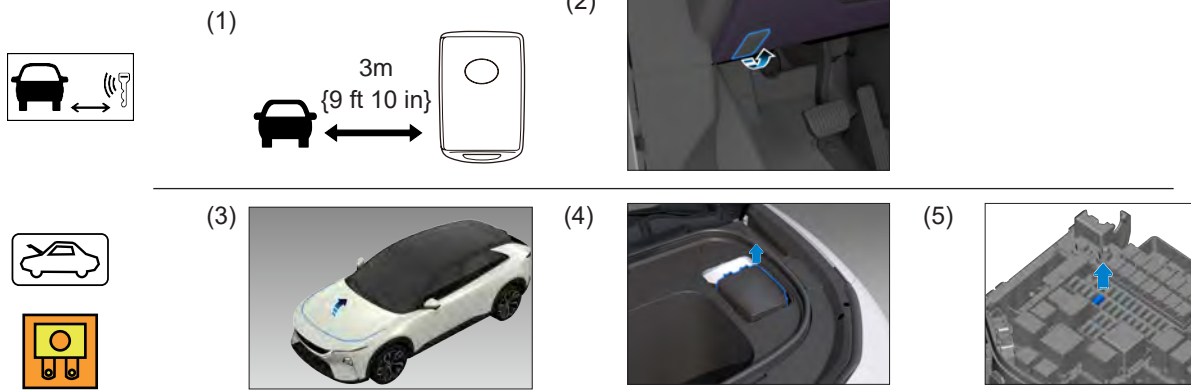

4. Access to the occupants

Glass types

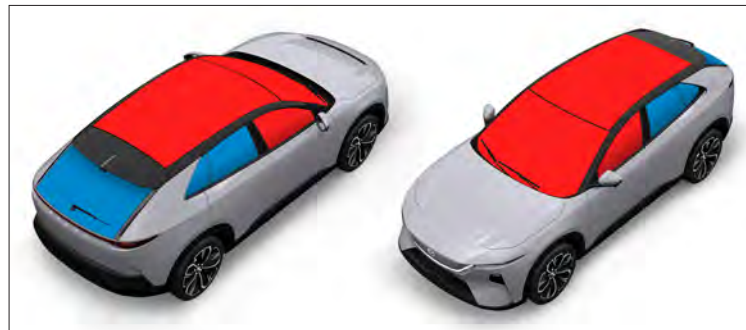

Steering wheel adjustment



Vehicle door



High strength steel in body



- 2,000 MPa
- 1,500 MPa
- 1,180 MPa
- 980 MPa
- 780 MPa
- 590 MPa

Seat position operation



5. Stored energy / liquids / gases / solids

	Li-ion/77.94kw-h DC 364V	
	Pb / DC 12V	
	R-1234yf / 1000g {35.27 oz}	



THE BATTERY ASSEMBLY COVER SHOULD NEVER BE BREACHED OR REMOVED UNDER ANY CIRCUMSTANCES, INCLUDING FIRE. DOING SO MIGHT RESULT IN SEVERE ELECTRIC BURNS, SHOCKS, OR ELECTROCUTION.

6. In case of fire



EXTINGUISH THE FIRE USING LARGE AMOUNTS OF WATER OR AN ABC FIRE EXTINGUISHER.



DO NOT SUBMERGE THE VEHICLE IN WATER TO EXTINGUISH / COOL A BATTERY FIRE. BATTERY RE-IGNITION!

7. In case of submersion



- DO NOT TOUCH ANY HIGH VOLTAGE PARTS WHEN THE VEHICLE IS SUBMERGED OR PARTIALLY SUBMERGED IN WATER.
- IF THE HIGH VOLTAGE BATTERY IS DAMAGED OR YOU ARE UNSURE WHETHER OR NOT IT IS DAMAGED, PERFORM THE RESCUE OPERATION WHILE WEARING THE APPROPRIATE INSULATING PROTECTIVE EQUIPMENT.
- AFTER PULLING THE VEHICLE OUT OF THE WATER, DRAIN THE INTERIOR OF THE VEHICLE.

8. Towing / transportation / storage



BATTERY RE-IGNITION!



KEEP THE VEHICLE OUTDOORS AWAY FROM FLAMMABLES.

9. Explanation of pictograms used

	Pure Electricity		General warning sign		Laminated glass
	Bonnet		Warning, Electricity		Tempered glass
	Steering wheel, tilt control		Use thermal Infrared camera		
	Seat adjustment, longitudinal		Explosive		Boot
	Seat height adjustment		Flammable		Remove smart key
	Seat adjustment, seat back recline		Corrosives		Air conditioning component
	Use water to extinguish the fire		Gases under pressure		Door-lock control
	Use ABC powder to extinguish the fire		Hazardous to the human health		Window lift (power-operated)
	Lifting point; central support				